Height Gage

A standard measuring tool of industry

Digimatic Height Gage SERIES 192 — Multi-function Type with SPC Data Output

MeasurLink® ENABLED

Data Management Software by Mitutoyo

- Double-column structure ensures high measuring accuracy.
- Ergonomic base fits comfortably in the hand.
- A bidirectional touch-trigger probe is available as an optional accessory for 192-663-10,192-664-10,192-665-10,192-670-10,192-671-10,192-672-10 and 192-673-10.
- Better readability is provided thanks to display of measurement result with a large character height (11 mm) and high-contrast LCD.
- Inclined handle improves slider ergonomics.

- Allows integration into statistical process control and measurement systems.
 Refer to page A-3.
- Battery: SR44 (1 pc), **938882**. For initial operational checks (standard accessory)
- Battery life is 3,500 hours in continuous use.
- Carbide-tipped long scriber (905200 with overall length of 150 mm) is provided as a standard accessory for 192-663-10, 192-664-10 and 192-665-10.
- For precision Black Granite Surface Plates, refer to page E-46.



Metric				100					
	Order No.	Range (mm)	Resolution (mm)	Accuracy (mm)*	Repeatability (mm)	Max. response speed (mm/s)	Height (mm)	Mass (kg)	
	192-663-10	0 - 300	0.01 (0.005)	±0.02		500	510	5.7	
	192-664-10	0 - 600		±0.04	0.01		802	8.3	
	192-665-10	0 - 1000		±0.06			1228	15.7	
	192-613-10	0 - 300		±0.02			475	4.7	
	192-614-10	0 - 600		±0.05			802	8.3	
	192-615-10	0 - 1000		±0.07			1228	15.7	

^{*} Excluding quantizing error of ± 1 count

Inch/Metric							
Order No.	Range (in)	Resolution	Accuracy (in)*	Repeatability (mm)	Max. response speed (mm/s)	Height (mm)	Mass (kg)
192-670-10	0 - 12	0.0005 in/0.01 mm (0.0002 in/0.005 mm)	±0.001		500	510	5.7
192-671-10	0 - 18		±0.0015			649	7.5
192-672-10	0 - 24		±0.0015			802	8.3
192-673-10	0 - 40		±0.0025	0.01		1228	15.7
192-630-10	0 - 12		±0.001	0.01		475	4.7
192-631-10	0 - 18		±0.002			649	7.5
192-632-10	0 - 24		±0.002			802	8.3
192-633-10	0 - 40		±0.003			1228	15.7

^{*} Excluding quantizing error of ±1 count



Functions

MeasurLink' ENABLED

Origin-setting (ABS measurement mode):
 Any arbitrary value can be stored as the origin point.

Products equipped with the measurement data output function can be connected to the measurement data network system MeasurLink (refer to page A-5 for details).

Zero-setting (INC measurement mode):
 Displayed value can be set to zero at any arbitrary position of the slider.

 Origin restoration: Previously set origin is restored when switching back to ABS mode.

Presetting (ABS INC measurement mode):
 Displayed value can be set to any arbitrary value,
 including negative values.


Measuring direction
 Measuring direction can be switched at the press of a
 button.

Data hold
 Display value can be held. Reverts to ABS or INC mode when cancelled.

 Alarm: Error message is displayed when overflow or overspeed of displayed value arises and measurement is stopped.

Data output:
 Allows integration into statistical process control and measurement systems. (Refer to page A-3.)

 Fine and coarse height adjustment through knob and wheel combination.
 Slider height adjustment wheel allows fine and coarse height adjustment.

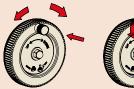





Push the small fine-adjustment knob in to disengage gearing and then turn the large wheel.


Pull the fine-adjustment knob out to engage gearing and then turn this knob, which then slowly turns the wheel.

 Low-voltage alert: When battery voltage becomes low, a warning appears in the display.

 Probe-tip diameter compensation:
 An adjustment is applied to the raw measurement data to compensate for the effect of the size of the spherical contact point used by the bidirectional touch-trigger probe.

Presetting (2 positions)

• With two preset functions, two reference heights can be used relative to a surface plate.

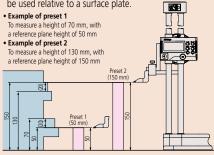

Power ON/OFF button—Height-adjustment wheel

Zero set/ABS button

Hold/data button

Button used when presetting and compensating probe tip diameter


Preset/probe-tip-diameter

Button used when presetting

compensation mode button measuring direction and compensating probe-tip diameter

Note: Probe-tip-diameter compensation mode is a function provided for 192-663-10/192-664-10/192-665-10/192-670-10/ 192-671-10/192-672-10/192-673-10.

DIMENSIONS

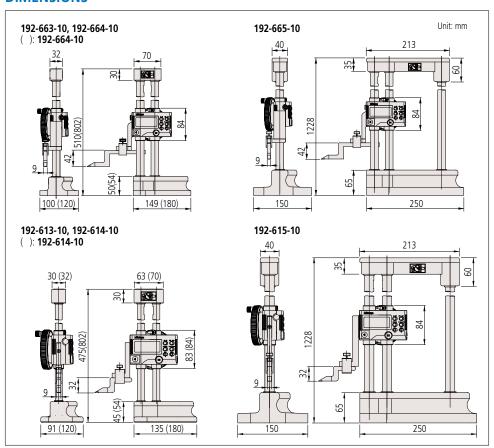

Optional Accessory

• Bidirectional touch-trigger probe

Improves accuracy in step, internal thickness, and outside width measurement by minimizing reproducibility error. A bidirectional touch-trigger probe is available as an optional accessory for 192-663-10,192-664-10,192-665-10,192-670-10,192-671-10,192-672-10 and 192-673-10.





SPECIFICATIONS

Metric							
Order No.	Measuring direction	Relay contact type	Probe overtravel (mm)	Probe size (mm)	Repeatability (µm)	Measuring force (N)	Standard accessories
192-007	Bidirectional	Normally Open	1.5	ø3	σ: 2	0.4	Holder arm, Clamp

Inch										
	Order No.	Measuring direction	Relay contact type	Probe overtravel (mm)	Probe size (mm)	Repeatability (µm)	Measuring force (N)	Standard accessories		
	192-008	Bidirectional	Normally Open	1.5	ø3	σ: 2	0.4	Holder arm, Clamp		

For details of the connecting cable, refer to page A-25, and for the holder arm and clamp, refer to page F-75.

• Connecting cables for IT/DP/MUX

905338: SPC cable (1 m) **905409**: SPC cable (2 m)



- USB Input Tool Direct 06AFM380F: SPC cable for USB-ITN-F (2 m)
- Connecting cables for U-WAVE-T 02AZD790F: SPC cable (160 mm) 02AZE140F: SPC cable for foot switch
- 953638: Holding bar*
- 902053: Swivel clamp*
- * A test indicator can be mounted on a height gage using a holding bar and clamp.

